

CosmicByte[®]
switch to GOD MODE

ARTEMIS

MECHANICAL GAMING KEYBOARD



USER MANUAL

HIGHLIGHTS



- Win-Key Lock Windows Buttons can be disabled.
- Simultaneous Operation for All Keys Without Any Key Ghosting Effects.
- 50 million+ Operations for Each Key.



Visit www.thecosmicbyte.com to download software for the Keyboard

SPECIFICATIONS

1. System	Windows, Mac
2. Switch Working Life	OUTEMU 50 million times
3. Key Number	68keys US layout
4. Product Interface	USB C to USB A
5. Cable	PVC Cable 1.7m
6. Current Consumption	max.200mA
7. Size	292*102*40mm
8. Weight	560g

MULTIMEDIA FUNCTIONS

Multimedia Key Combination		FN Combination Keys	
FN + 1	F1	FN + .	HOME
FN + 2	F2	FN + /	END
FN + 3	F3	FN + Win	Win lock
FN + 4	F4	FN + Ctrl(R)	Search
FN + 5	F5	FN + PgDn	Volume -
FN + 6	F6	FN + PguP	Volume +
FN + 7	F7	FN + Rt ALT	Mute
FN + 8	F8	FN + DEL	Switching Lighting Effect
FN + 9	F9	FN + ~	Change Single ColorLighting
FN + 0	F10	FN + \	User-Defined Lighting
FN + -	F11	FN + ↑	Increase LED Brightness
FN + =	F12	FN + ↓	Decrease LED Brightness
FN + [PrtSc	FN + →	Increase Speed of Dynamic Lighting
FN +]	ScrLk	FN + ←	Decrease Speed of Dynamic Lighting
FN + ;	PauBr	FN + Space	Lighting On/Of
FN + ' 	INS		

REPLACING THE SWITCHES

- The Artemis keyboard is upgraded to support Swappable Outemu switches. This means that switches are not soldered onto the PCB, and you can easily remove and replace switches.
- This helps to increase the life span of the keyboard. If any of the switch stops working just use the included Keycap and Switch puller to remove the keycap and switch and replace the switch with a new one.
- You can also change the switch colour to any Blue, Red, Brown or other Outemu Swappable Switches to customize the keyboard as you require without any hassle.



SCAN QR CODE FOR
VIDEO GUIDE

TROUBLESHOOTING

1. Resetting the Keyboard

Ans: If you face any issue with the keyboard, we will first recommend you reset the keyboard by pressing FN+ESC key for 3 seconds. This will reset the keyboard to its factory default settings.

2. PC not detecting keyboard

Ans: Kindly try and change the USB port used to connect the keyboard. We recommend you connect the keyboard directly to the back of the PC to avoid any issue with detection. Use of USB extensions can cause the PC failure in detecting the Keyboard.

3. Additional Support:

Ans: Contact our customer care team on cc@thecosmicbyte.com to troubleshoot or claim warranty. Please note warranty will not be valid if purchased from Unauthorized Sellers or for products tampered by third party technicians.

SUPPORT DETAILS

Customer Care Number: +91 7351615161 (Mon-Sat 10am to 6pm)

WhatsApp Support: +91 7351615161

Email: cc@thecosmicbyte.com

WARRANTY

- The Artemis Keyboard carries 1 year warranty against manufacturing defects only.
- Physical, water damage and tampered products are not covered under warranty.



Scan the QR Code to know the Warranty Claim Procedure.