

CosmicByte[®]
switch to GOD MODE

ARES

WIRED CONTROLLER



USER MANUAL

PRODUCT OVERVIEW

The Cosmic Byte Ares Wired Controller is a high-performance USB controller designed specifically for **PC**. It supports both **X-Input and DirectInput modes**, ensuring wide compatibility across modern and legacy PC games.

It features:


- Ergonomic design with textured grip
- Dual analog sticks with precision control
- Pressure-sensitive triggers
- LED-illuminated ABXY buttons
- Turbo and Auto-Turbo functionality
- Multiple input modes and LED indicators

PACKAGE CONTENTS

- 1 × Cosmic Byte Ares Wired Controller
- 1 × User Manual



PRODUCT LAYOUT & CONTROLS

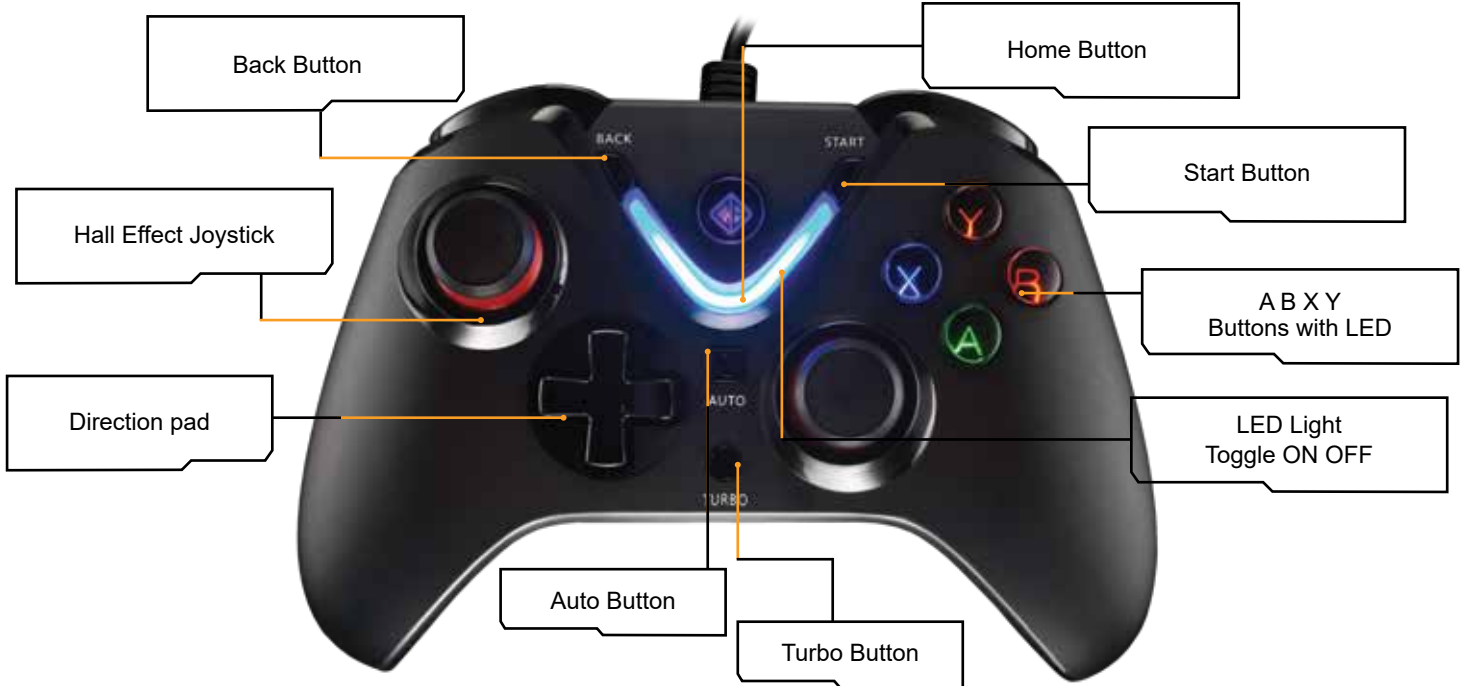

TECHNICAL SPECIFICATIONS

Feature	Details
Model	Ares Wired
Interface	USB
Working Modes	X-Input / DirectInput
Supported USB	USB 2.0 / 3.0
Product Size	156 × 105 × 55 mm
Weight	220 g
Joystick	Hall Effect
Triggers	Hall Effect

SYSTEM COMPATIBILITY

- **Supported**
 - Windows 7 / 8 / 10 / 11 (Plug & Play for Windows 8 and above)
- **Limited / Unsupported**
 - Android (OTG required; compatibility not guaranteed)
 - Legacy systems may require manual configuration

IMPORTANT CONSOLE DISCLAIMER

- This controller is **STRICTLY DESIGNED FOR PC USE ONLY.**
 - ✗ Not compatible with PlayStation, Xbox, Nintendo, or any gaming console
 - ✗ No warranty or support is provided for console usage
 - ✗ Any attempt to use via adapters, converters, or third-party tools is **not covered under warranty**

Warranty is valid only when used as intended — on PC systems.

CONNECTION INSTRUCTIONS

- **PC Connection**
 - Plug the controller into a USB port
 - Recommended: Use **rear USB port** for stable power
 - Controller will auto-detect as **X-Input (default)**

No driver installation required for Windows 8 and above.

INPUT MODES & LED INDICATORS

Mode	LED Color
X-Input	Blue
DirectInput	Red
PC Analog	Yellow
Android	Green
Other	Auto-detect

MODE SWITCHING

- Press and hold **HOME button** for 5 seconds
 - Toggles between **X-Input** and **DirectInput**

KEY FUNCTIONS

1. Joystick & D-Pad Swap

- Press **L3 + Back Button**
 - Switch between Left Stick and D-Pad functionality

2. LED Controls

- **Toggle ABXY LED:**
Press **X + Back**
- **Toggle V LED (center LED strip):**
Press **A + Back**

TURBO & AUTO TURBO FUNCTIONS

- **Supported Buttons:**
 - A, B, X, Y, L1, L2, R1, R2
- **Set Turbo**
 - Press desired button
 - Press **Turbo button**
- **Cancel Turbo**
 - Press same button
 - Press **Turbo button again**
- **Set Auto Turbo**
 - Press desired button
 - Press **AUTO button**
- **Cancel Auto Turbo**
 - Press same button
 - Press **AUTO button again**

ANDROID USAGE (OPTIONAL)

- Requires **Android 4.0+ with OTG support**
- Connect using OTG cable
- ⚠ Android compatibility varies by device and is **not covered under warranty**

TROUBLESHOOTING

1. Controller Not Detected

Solutions:

- Try a different USB port (prefer rear port)
- Avoid USB hubs
- Restart PC
- Check Device Manager → Look under “Game Controllers”
- Try another cable/port (if detachable extension used)
- Press reset (if unresponsive)

2. Buttons Not Working Correctly

Solutions:

- Switch between X-input and DirectInput (HOME button 5 sec)
- Reconnect controller
- Test in Windows “Game Controllers” panel:
 - Press Win + R → joy.cpl
- Check in-game controller settings

3. Controller Not Working in Game

Solutions:

- Ensure game supports controller input
- Switch input mode (X-input recommended)
- Enable controller in game settings
- For older games → use DirectInput mode

4. Analog Stick Drift / Incorrect Movement

Solutions:

- Reconnect controller
- Avoid pressing sticks while plugging in
- Check calibration in Windows:
 - Control Panel → Devices → Game Controller Settings
- If persists → possible wear (not warranty unless manufacturing defect)

5. Turbo Not Working

Solutions:

- Ensure correct button sequence:
 - Press button → then Turbo
- Try reassigning Turbo
- Disable and reset Turbo

6. LED Not Working

Solutions:

- Toggle using:
 - X + Back (ABXY LED)
 - A + Back (V LED)
- Reconnect controller

7. Frequent Disconnects

Solutions:

- Use rear USB port
- Avoid loose USB ports
- Do not use low-quality USB extensions
- Check cable for damage

8. Not Working on Android

Solutions:

- Ensure OTG enabled
- Check device compatibility
- Try different OTG adapter

⚠ Not covered under warranty

RESET FUNCTION

- Use **Reset pinhole (rear side)**
 - Press gently using a pin if controller becomes unresponsive

SAFETY & USAGE GUIDELINES

- Do not expose to water or moisture
- Avoid dropping or physical damage
- Do not open or tamper with internal components
- Keep away from extreme temperatures

SUPPORT DETAILS

Customer Care Number: +91 7351615161 (Mon-Sat 10am to 6pm)

WhatsApp Support: +91 7351615161

Email: cc@thecosmicbyte.com

WARRANTY

- The Ares Wired controller carries 1 Year warranty against manufacturing defects only.
- Physical, Water damage and Tampered products are not covered under warranty.
- Regular wear and tear from battery usage is not covered under warranty.



Scan the QR code to know the Warranty Claim Procedure.