

**CosmicByte**<sup>®</sup>  
*switch to GOD MODE*



# BLITZ

TRI-MODE CONTROLLER




**USER MANUAL**

# HIGHLIGHTS

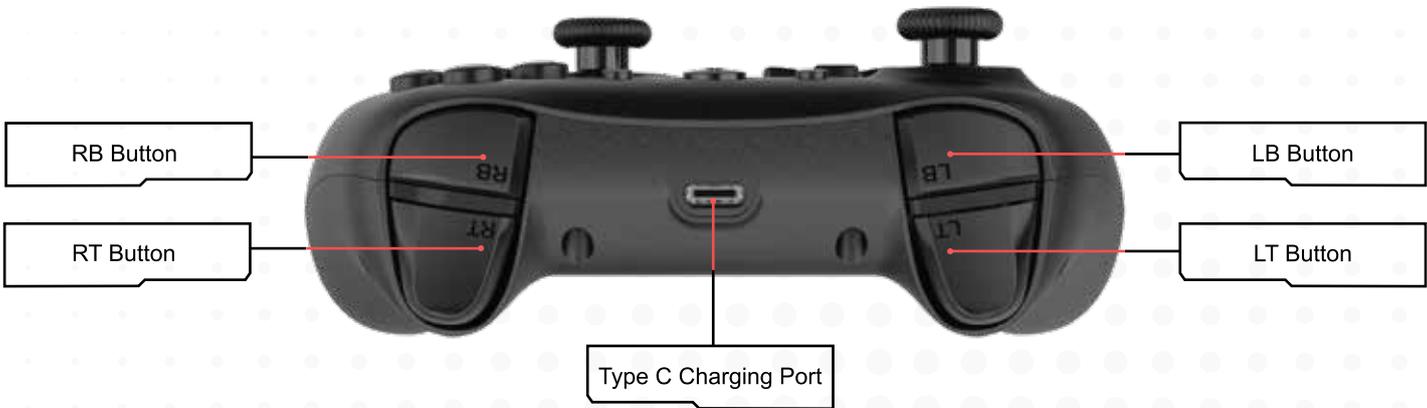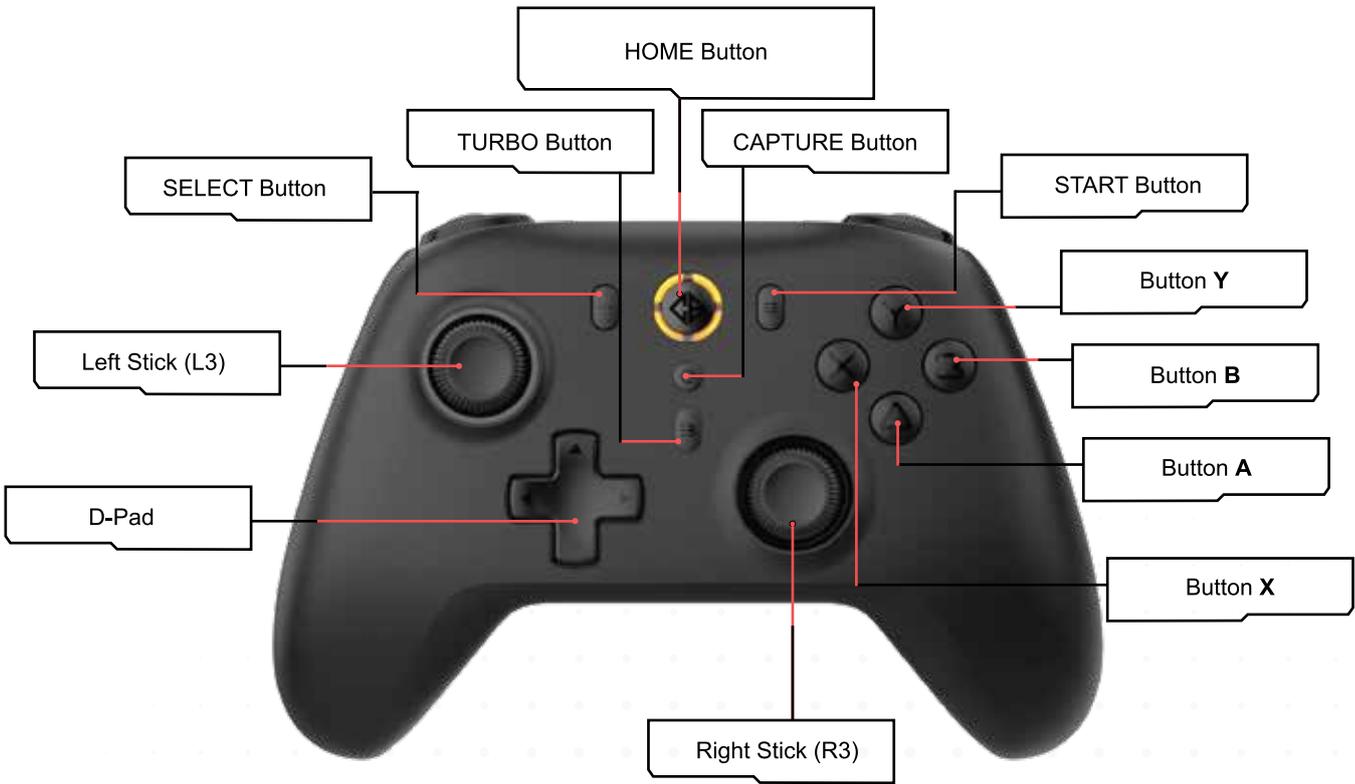

**600MAH BATTERY**

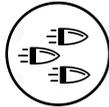

**TURBO & AUTO TURBO FUNCTION**



**1000HZ POLLING RATE**



**HALL EFFECT TRIGGER & TMR JOYSTICK**



**Visit us to download the software**  
[www.thecosmicbyte.com](http://www.thecosmicbyte.com)

## SPECIFICATIONS

1. **Product Type:** Tri-Mode Wireless Controller
2. **Connectivity:** USB Wired / 2.4GHz Wireless / Bluetooth
3. **Input Modes:** X-Input / D-Input (PC)
4. **Polling Rate:** Up to 1000Hz
5. **TMR Sticks:** High-Precision TMR Sticks
6. **Triggers:** Hall-Effect Analog Triggers
7. **Buttons:** 19 Physical Buttons
8. **Vibration:** Dual Motor, 4 Levels
9. **Battery:** Rechargeable Lithium Battery
10. **Charging Port:** USB Type-C
11. **Charging Dock Support:** Yes (Blitz Tri-Mode only, sold separately)
12. **Macro Support:** Yes
13. **Turbo Support:** Yes
14. **Auto Sleep:** Yes

## INTRODUCTION

Thank you for purchasing the Cosmic Byte Tri-Mode Controller, engineered for accurate input, low-latency performance, and advanced customization.

The controller supports USB Wired, 2.4GHz Wireless, and Bluetooth connectivity, allowing flexible use across supported devices.

## IMPORTANT USAGE DISCLAIMER

- This controller is **designed for PC use only**
- **Consoles are NOT supported**
- Some functions may not work on Android or iOS devices, but **PC is the primary supported platform**
- Usage with unsupported devices may result in improper functionality
- **Warranty is NOT applicable** for damage or malfunction caused by usage with unsupported devices

# KEY FEATURES

- **Tri-Mode Connectivity**
  - USB Wired
  - 2.4GHz Wireless (USB Receiver)
  - Bluetooth
- **High-Precision Next Gen TMR 3D Sticks**
  - Drift-resistant, smooth linear response
- **Hall-Effect Analog Triggers**
- **Up to 1000Hz Polling Rate** (PC Wired & 2.4GHz)
- **TURBO & AUTO Fire Support**
- **Macro Programming**
- **Adjustable Dual-Motor Vibration**
- **Screenshot / Capture Function**
- **Charging Dock Support** (Tri-Mode model only, sold separately)

# CONNECTIVITY MODES OVERVIEW

## WIRED MODE

PLATFORM	INPUT MODE	HOW TO CONNECT (PRESS FOR 3 SEC)	LED STATUS
PC	X-Input	Plug into PC and press HOME to start	LED2 stays ON
	D-Input	Under X-Input, long-press HOME	LED3 stays ON
Android	D-Input	Plug into Android device and press HOME to start	LED3 stays ON
	X-Input	Under D-Input, long-press SELECT + HOME	LED2 stays ON
	Mouse Mode	<b>Switch to Mouse Mode</b> Hold CAPTURE + R3 for 5seconds <b>Mouse Controls</b> 1. A → Left click 2. B → Right click 3. Right Stick → Cursor movement Repeat CAPTURE + R3 to return to controller mode.	LED3 & LED4 stays ON
iOS	—	Not Supported	—

## 2.4GHZ WIRELESS MODE

PLATFORM	INPUT MODE	HOW TO CONNECT (PRESS FOR 3 SEC)	LED STATUS
PC	X-Input	Press X + HOME	LED2 stays ON
	D-Input	Under X-Input, long-press HOME	LED3 stays ON
Android	D-Input	Press X + HOME	LED3 stays ON
	X-Input	Under D-Input, long-press SELECT + HOME	LED2 stays ON
	Mouse Mode	<b>Switch to Mouse Mode</b>  Hold CAPTURE + R3 for 5seconds <b>Mouse Controls</b> 1. A → Left click 2. B → Right click 3. Right Stick → Cursor movement  Repeat CAPTURE + R3 to return to controller mode.	LED3 & LED4 stays ON
iOS	—	Not Supported	—

## BLUETOOTH MODE

PLATFORM	INPUT MODE	HOW TO CONNECT (PRESS FOR 3 SEC)	LED STATUS
PC	X-Input	Press B + HOME	LED2 stays ON
	D-Input	Press A + HOME	LED3 stays ON
	Gyro Mode	Press Y + HOME	LED4 stays ON
Android	D-Input	Press A + HOME	LED3 stays ON
	X-Input	Press B + HOME	LED2 stays ON
	Gyro Mode	Press Y + HOME	LED4 stays ON
	Dualshock Mode	Press Turbo + HOME	LED1 stays ON
iOS	X-Input	Press B + HOME	LED2 stays ON
	Gyro Mode	Press Y + HOME	LED4 stays ON
	Dualshock Mode	Press Turbo + HOME	LED1 stays ON

## PC STEAM MODE (WIRED ONLY)

1. Ensure controller is powered off.
2. Press and hold **R3 (right stick click)**.
3. While holding R3, plug USB cable into PC.
4. Controller boots directly into **Steam-compatible mode**.

## TURBO & AUTO FIRE FUNCTIONS

### ENABLE TURBO

- Hold **TURBO + desired button**

### ENABLE AUTO FIRE

- Press **TURBO + same button** again

## **CLEAR TURBO / AUTO**

- Hold **CLEAR + button**
- Or hold **TURBO for 5 seconds** to clear all

## **TURBO SPEED LEVELS**

- Level 1: 5 presses/sec
- Level 2: 12 presses/sec (Default)
- Level 3: 20 presses/sec

## **ADJUST SPEED**

- Hold **TURBO**
- Right Stick → Right = Increase
- Right Stick → Left = Decrease

# **VIBRATION STRENGTH ADJUSTMENT**

1. Hold **TURBO**
2. Push Right Stick:
  - a. Up → Increase
  - b. Down → Decrease

## **Levels**

- 100%
- 70% (Default)
- 40%
- 0% (Off)

# **ADVANCED CONTROLLER FUNCTIONS**

1. **ABXY Swap:** Hold **TURBO + R3** (3 sec)
2. **D-Pad ↔ Left Stick Swap:** Hold **START + L3** (3 sec)
3. **Stick Shape Mode:** Hold **L3 + TURBO**
  - a. Circle Mode (Default)
  - b. 45-Degree Square Mode

## STICK CALIBRATION

1. Power off controller
2. Hold **CAPTURE + HOME**
3. Press **A**
4. Rotate both sticks fully 3 times
5. Fully press both triggers 3 times
6. Press **A** again to save

## MACRO PROGRAMMING

### RECORD MACRO

- Hold **TURBO** for 3 seconds
- Perform button sequence
- Press **TURBO** to save

### EXECUTE MACRO

- Double-press **TURBO**

### CLEAR MACRO

- Enter macro mode → Press **TURBO** without recording

Supports up to 22 inputs per macro

## BATTERY, CHARGING & DOCK SUPPORT

- **Charging Methods**
  - USB Type-C cable
  - Charging Dock (Blitz Tri-Mode model only, sold separately)
- **Charging Time:** 2.5–3 hours
- **Battery Level Check**
  - Press **TURBO + START**

### LEDs Battery Level

1	2	3	4
21–25%	26–50%	51–75%	76–100%

## POWER & RESET FUNCTIONS

- **Power ON:** Press **HOME** (0.5–1 sec)
- **Auto Sleep:** 5 minutes inactivity
- **Power OFF:** Hold **HOME** for 5 seconds
- **Controller Reset:** Hold **HOME** for 8 seconds
- **Factory Reset:** Hold **SELECT + L3 + R3** for 5 seconds

## TROUBLESHOOTING

- **Controller not powering on**
  - Battery fully drained → Charge 30–60 minutes
  - Try different USB power source
  - Perform reset (HOME 8 sec)
- **Controller charging but not working**
  - Press HOME once after USB connection
  - Disconnect 2.4GHz receiver if wired data needed
- **Controller not connecting wirelessly**
  - Remove previous Bluetooth pairing
  - Ensure correct pairing key combination
  - Reset controller and re-pair
- **Buttons behaving incorrectly**
  - ABXY swap may be enabled
  - Perform factory reset
- **Analog stick drift**
  - Perform stick calibration
  - Reset controller
- **No vibration**
  - Increase vibration level
  - Check in-game vibration settings
- **Macro not working**
  - Double-press TURBO to execute
  - Ensure macro was saved properly
- **Android mouse mode not working**
  - Works only in wired / 2.4GHz mode
  - Bluetooth does not support mouse mode

- **iOS controller not detected**
  - Ensure Bluetooth-only pairing
  - iOS app must support external controllers
- **Steam not detecting controller**
  - Use Steam Mode (wired only)
  - Restart Steam after connection

## SUPPORT DETAILS

**Customer Care Number:** +91 7351615161 (Mon-Sat 10am to 6pm)

**WhatsApp Support:** +91 7351615161

**Email:** cc@thecosmicbyte.com

## WARRANTY

- The Blitz Tri-Mode Controller carries 1 year warranty against manufacturing defects only.
- Physical, water damage and tampered products are not covered under warranty.



---

Scan the QR Code to know the Warranty Claim Procedure.