

ComicByte®  
switch to GOD MODE

# INTERSTELLAR

WIRED CONTROLLER



**USER MANUAL**

**ECCENTRIC 360  
ANALOG LEFT STICK**

**SELECT  
BUTTON**

**START  
BUTTON**

**PRESSURE SENSITIVE  
LEFT & RIGHT TRIGGERS**

**HOME  
BUTTON**

**LED A B X Y  
BUTTONS  
WITH LED**

**TURBO  
FUNCTION**

**ULTRA PRECISE CROSS  
WITH EIGHT-  
WAY D-PAD**

**ECCENTRIC 360  
ANALOG RIGHT STICK**

**RUBBERISED TEXTURE  
FOR ENHANCED GRIP**



## SPECIFICATIONS

Integrated Dual Mode: X-input and Direct-input for greater compatibility

Eccentric 360° analog sticks for more comfort

Ultra-precise eight-way D Cross

Double triggers and analog bumpers

12 numeric buttons, including [Home], [Start], [Select]...

Backlit Action Button,[A], [B], [X] [Y]

Special "Rapid Fire" with [Turbo] mode

Dual vibration motors

Compatibility: Windows PC

LED indicators

Comfortable rubber body

Length of cable:1.8m

 
Dimensions:158mm\*103mm\*69mm

Weight: 223g± 10g

## COMPATIBILITY

The controller is compatible with games running with Xinput or Dinput Mode.

# TURBO MODE

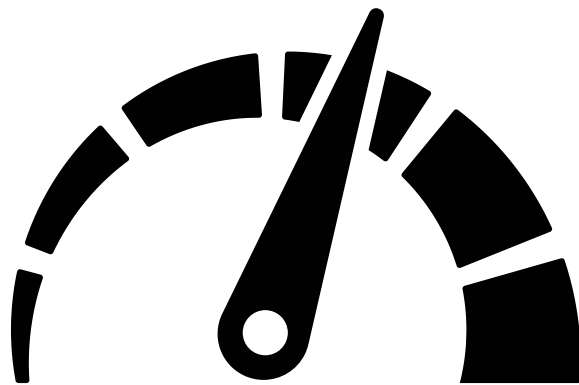

# TURBO MODE

## HOW TO ACTIVATE THE TURBO MODE?

Turbo mode is often used for FPS! It allows you auto-fire by pressing the selected button(A,B,X,Y,R1,L1,R2,L2). Thus, you avoid repetitive pressure of the same key. Lorem ipsum

### To activate the Turbo mode:

Hold the [TURBO] button

Then press the selected button(A,B,X,Y,R1,L1,R2,L2).

2. The Turbo function is enabled

 
### To deactivate the Turbo mode:

Press and hold the button where the Turbo function is enabled

2. Then press the [TURBO]

Note: The Turbo mode does not support eight-way D Cross/Joysticks/[START] and [SELECT]

# TROUBLESHOOTING

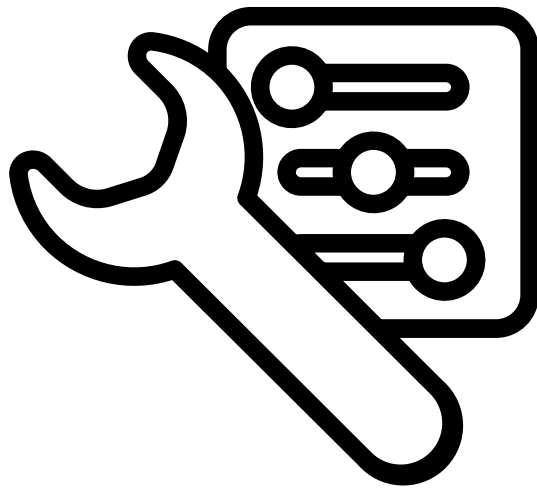

# TROUBLESHOOTING

## Why the gamepad does not work on my computer?

Make sure the USB port is functional

2. Try another USB port
3. User of Windows XP: install the driver from CD or downloading from CB website.
4. Use a USB port on the back of your computer

## Why the gamepad does not work with my game?

Your game does not support gamepad

 
Configure/activate your gamepad directly in the game interface

## No vibration! Why?

Your game does not support vibration

The vibration function is not activated in the settings of your game

# CONNECTIVITY

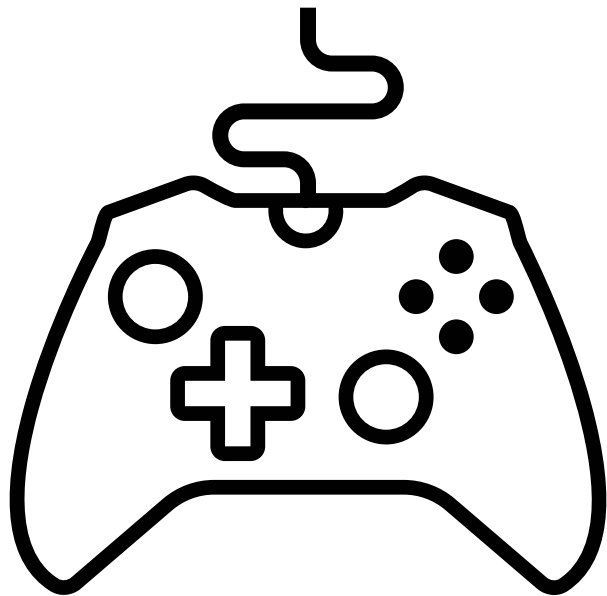



# HOW TO CONNECT THE COSMIC BYTE CONTROLLER TO YOUR PC?

## Required configuration:

**Operating System: Windows® XP to Windows 10**

**One USB port**

Plug the USB cable to your computer

Warning: You must install the Cosmic Byte driver for your controller running Windows® XP To avoid malfunctions (loss of vibration, disconnection), please connect the USB cable to a USB port on the back of your PC and not using a USB port on the front if you face any connection issues.

2. Your controller is connected to your PC while the Second LED stays on
3. To operate vibration mode under Dinput mode, please install the Cosmic Byte driver

 
## COSMIC BYTE DRIVER INSTALLATION:

Browse the CD and double click on "Setup" and follow the instructions to install the Cosmic Byte driver. To access the settings of your controller, click [START]>[Control Panel]>[Game Controllers]>[Settings] (the path may vary depending on your OS; the example is based on Windows XP)

**Note: Driver installation is only required for older versions of Windows; for the latest Windows operating system, it's plug-and-play.**



# INSTALLATION

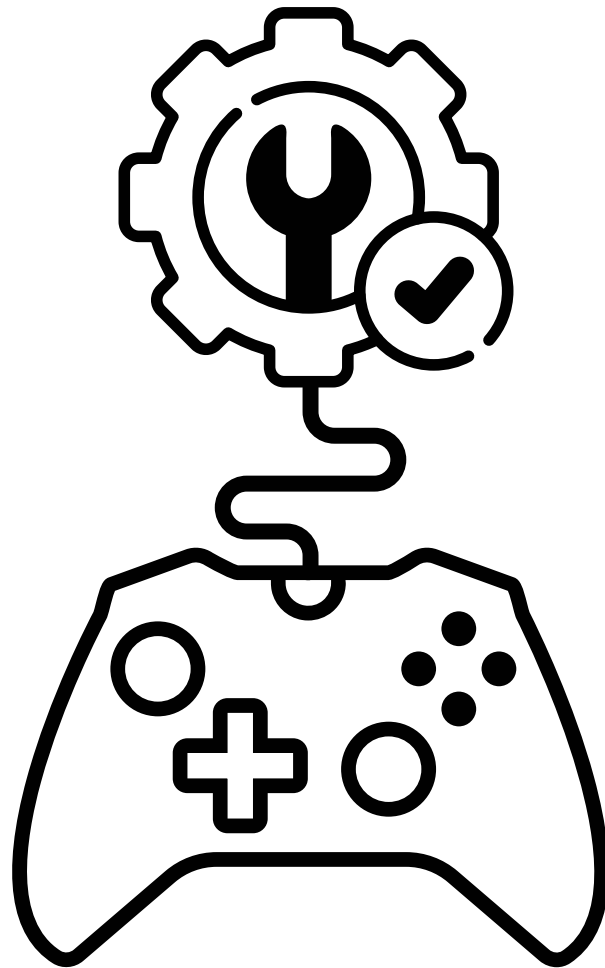

# INSTALLATION AND USE

## HOW TO SWITCH THE MODE TO D-INPUT OR X-INPUT MODE?

When your controller is connected to your PC with X-input mode, the Second LED light will lit up. You can switch Dinput mode by pressing [Home] button on your controller for 5 seconds: The First LED will lit up under D-input mode  
To return Xinput mode, press the [Home] button again on your controller for 5 seconds.

# **WARNINGS**



 
 
 
## Warning and Safety Instructions:

**Do not attempt to repair:** Do not attempt to disassemble, open, repair or alter the product, its accessories, or the power cable. You could electrocute yourself or cause other hazards. Any signs of attempts to open and/or alter this device, including removing or tearing a sticker, will void the warranty.

**Do Not use near liquid:** To reduce any risks of fire or electric shock, do not use this device near liquid and do not expose it to rain or moisture. Do not attempt to dry the device with a hair-dryer or microwave oven.

**Risk of asphyxiation:** this device may contain small parts, plastic bags or packaging that could represent a risk of asphyxiation for children. Keep all small parts, bags and packaging out of the reach of children.

# CONTROLLER FUNCTIONS

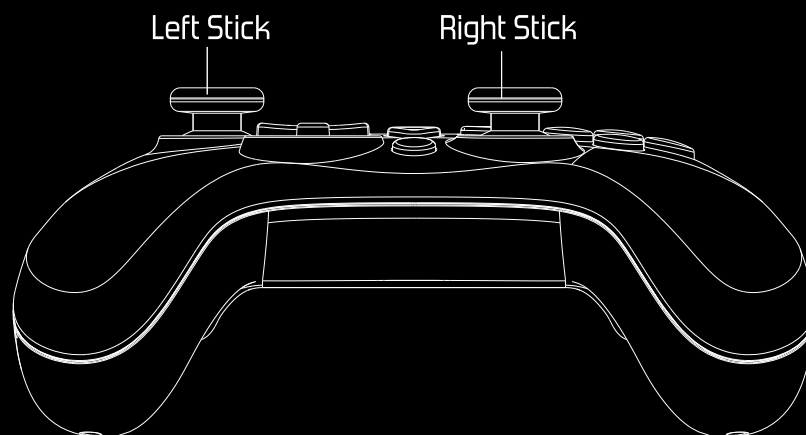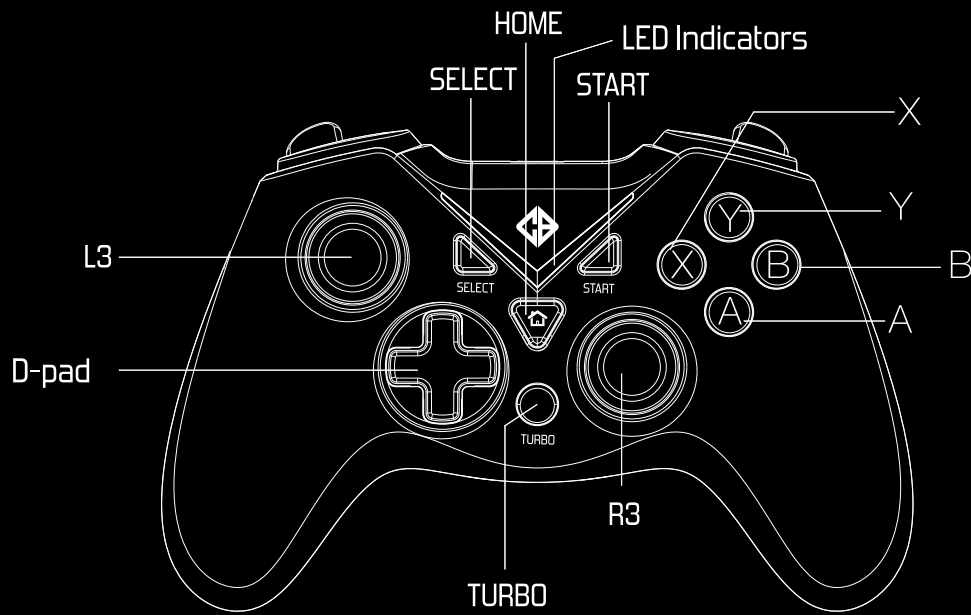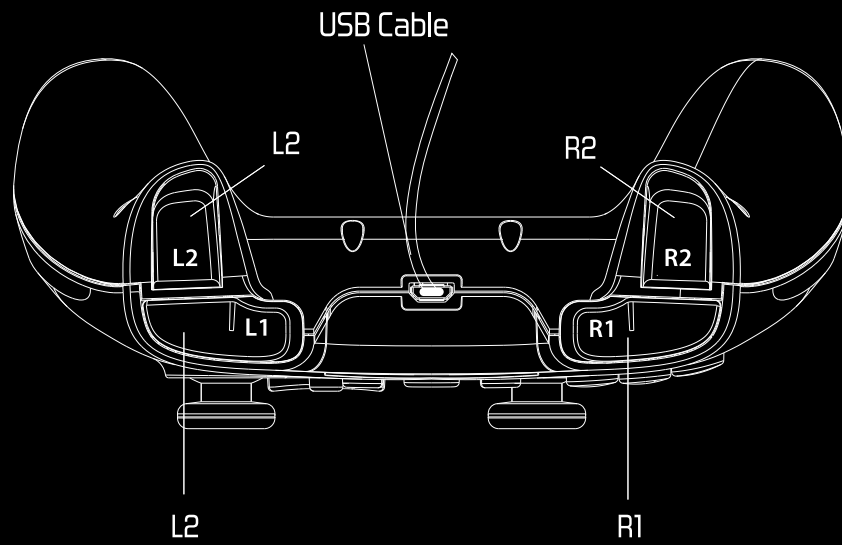

## SUPPORT DETAILS

Contact no: 07969273222 (Mon-Sat 10am to 6PM)

Email: [cc@thecosmicbyte.com](mailto:cc@thecosmicbyte.com)

## WARRANTY

The Gamepad carries 1 Year warranty against manufacturing defects only. Physical, Water damage and Tampered products are not covered under warranty. Regular wear and tear from battery usage is not covered under warranty.



[Scan the QR code to know the Warranty Claim Procedure.](#)

## FAQ'S

[support.thecosmicbyte.com](https://support.thecosmicbyte.com)