

 
**ComicByte**<sup>®</sup>  
*switch to GOD MODE*

# NEBULA





WIRELESS CONTROLLER



**USER MANUAL**

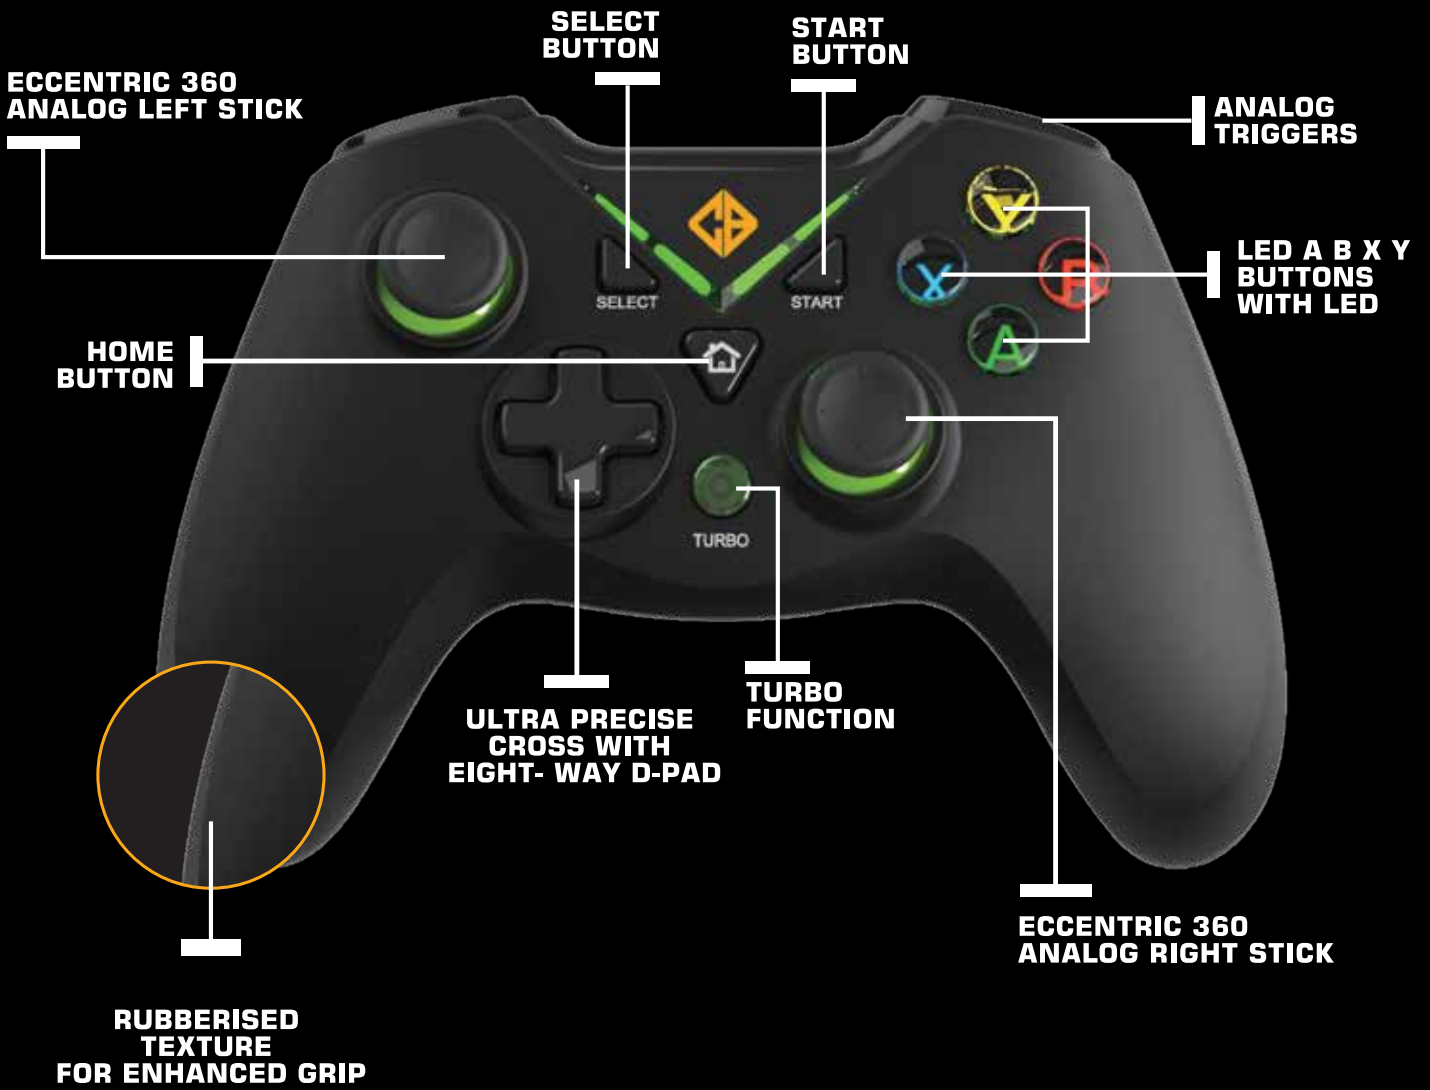

# GAMEPAD FUNCTIONS

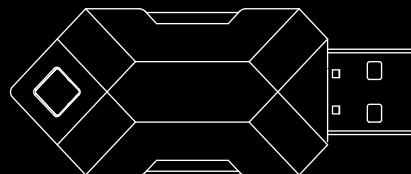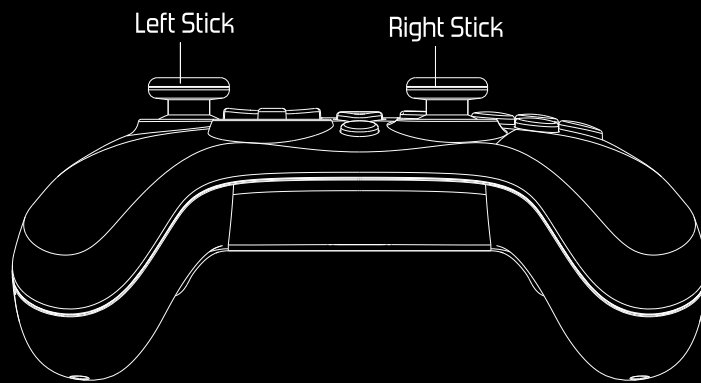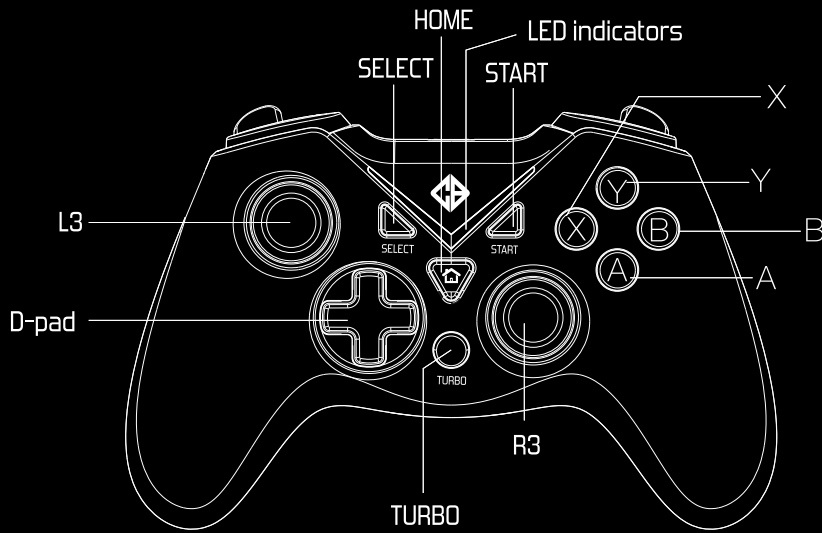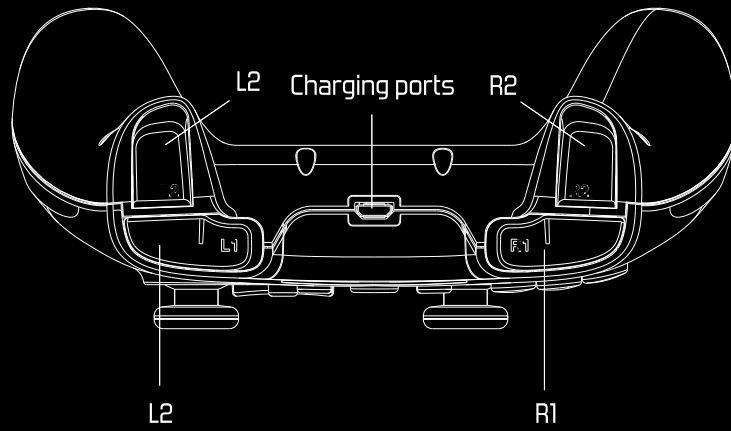    

USB receiver


## SPECIFICATIONS

 - Integrated Dual Mode: X-input and Direct-input
- Wireless 2.4GHz technology with a range of up to 8 meters
- Lithium Polymer 600mAh battery for playing up to 12 hours in a row
- Charging time 2 to 3 hours
- Eccentric 360° analog sticks for more comfort
- Ultra-precise eight-way D Cross
- Double triggers and analog bumpers
- 12 numeric buttons, including [Home], [Start], [Select]...
- Backlit Action Button, [A], [B], [X] [Y]
- Special "Rapid Fire" with [Turbo] mode
- Dual vibration motors for maximum thrill
- Compatibility: Windows
- LED indicators (connection charge, discharge...)
- Comfortable rubber body
- Wireless USB receiver
- USB C OTG Converter for Android Phone/Tablet (support OTG function)
- Length of charging cable: 1m ±5cm
- Dimensions: 158mm\*103mm\*69mm
- Weight: 190g ±10g

## COMPATIBILITY:

The controller is compatible with applications running with X-input or D-input Mode. The controller may not vibrate with some applications, as it may not support vibration.

# CHARGING

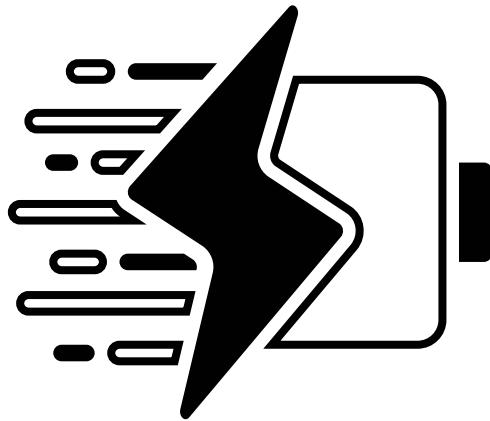

## CHARGING THE BATTERY:

When the controller is running out of power, the indicator light blinks quickly, in that case, you need charge the controller.

1. **Connected mode:** Keep the controller turned on, when the gamepad is charging, the indicator light that shows the current mode will blink slowly; when it's fully charged, the indicator light will stop blinking and couple of minutes later, the indicator light will turn off and the controller goes into sleep.

Example: When the gamepad connects to computer under X-input mode (the second indicator light is On), when the controller is charging, the second indicator light will blink slowly; when it's fully charged, the second indicator light will stop blinking and couple of minutes later, if no button is pressed, the indicator light will turn off, and the controller goes into sleep mode.

2. **Disconnected mode:** When the gamepad is charged, the four indicator lights will blink slowly; when it's fully charged, the four indicator lights will blink quickly. 1 minute later, if no button is pressed, the indicator light will turn off, and the controller goes into sleep mode.

 
**Info: The charging time is 2 to 3 hours for life-time of Approx 8-12 hours of usage**

## SLEEP MODE:

1. **Disconnected mode:** The four indicator lights will blink quickly, 1 minute later, the indicator lights will turn off, and the controller will go into sleep.
2. **Connected mode:** The indicator light will be on, if no button is pressed, 5 minutes later, the indicator lights will turn off, and the controller will go into sleep.

**Info: You can press HOME button to wake up the controller.**

# INSTALLATION

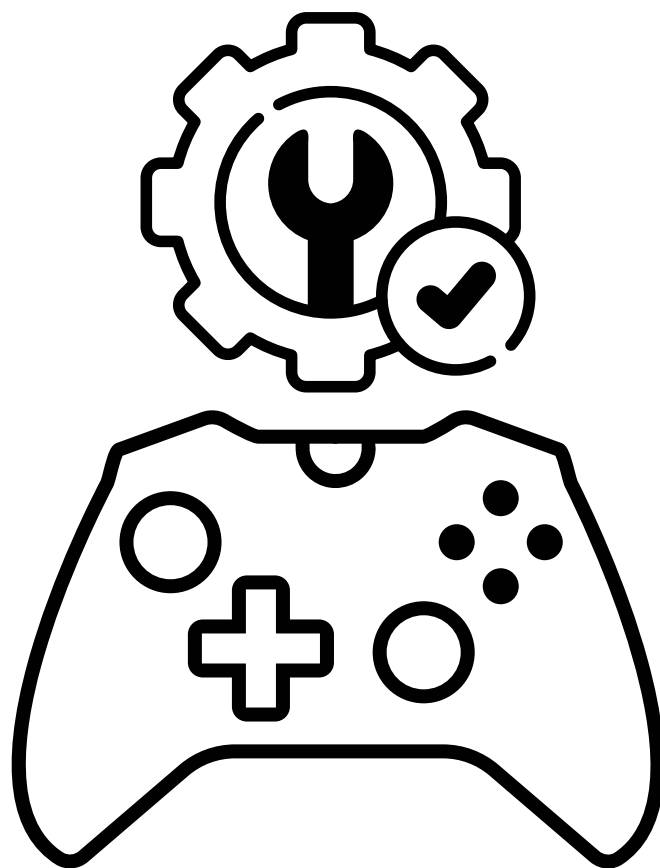

# INSTALLATION AND USE:

## HOW TO SWITCH THE MODE TO D-INPUT OR X-INPUT MODE?

When your controller is connected to your PC with X-input mode, the second LED light will lit up. you can switch D-input mode by pressing [Home] button on your controller for 5 seconds, the First LED will lit up. The First LED and Second LED light will lit up under Analog mode.To return X-input mode, press again the [Home] button on your controller for 5 seconds.

## HOW TO ACTIVATE THE TURBO MODE?

Turbo mode is often used for FPS! It allows you auto-fire by pressing the selected button (A, B,X,Y,R1,L1,R2,L2). Thus, you avoid repetitive pressure of the same key.

### Let us set A button as a example:

#### To activate the Turbo mode:

1. Hold the [TURBO] button
2. Then press A button
3. The Turbo function of A button is enabled

After activating the Turbo function of A button, press A button, Turbo button will blink.

#### To deactivate the Turbo mode:

1. Press and hold the button where the Turbo function is enabled
2. Then press the [TURBO]

**Note: The Turbo mode does not support eight-way D Cross/Joysticks/[START] and [SELECT]**

**Charging:** Charge the gamepad using a USB port or a charger with a maximum output of 5 watts. Battery damage caused by using a high capacity charger is not covered under warranty.



# CONNECTIVITY



## HOW TO CONNECT THE COSMIC BYTE CONTROLLER TO YOUR PC?

### Required configuration:

- **Operating System: Windows® XP to Windows 11**
- **One USB port**

1. Plug Wireless USB receiver to your computer  
When you plug Wireless USB receiver into a USB port on the back of your PC, please use a USB Extension Cable, if you face unstable connectivity issue.
2. Turn on your controller by setting the switch to [ON] and press [START]
3. Press the Home button for 2 seconds to connect to the dongle for the first time.
4. The four LED indicators flash
5. Your controller is connected to your PC while the second LED stays on

## HOW TO CONNECT THE COSMIC BYTE CONTROLLER TO ANDROID SYSTEM?

**Some devices work with the Android operating system such as Smart Phone, Tablet, Smart TV, TV Box...So you can connect your Cosmic Byte controller.**

All Android devices may not work as compatibility depends on mobile and android device manufacturer. Cosmic Byte does not provide warranty for Android Usage.

1. Plug Wireless USB receiver to your Android device  
Warning: Smart Phone/Android Tablet must support OTG function and be equipped with an OTG converter. When your controller is used for Smart Phone/Android Tablet, pls plug the OTG Converter into the Phone/Tablet, and then plug Wireless USB Receiver into the OTG Convert.
2. Turn on your controller by setting the switch to [ON] and press [START]
3. The 4 LED indicators flash
4. Your controller is connected to your Android Device when Second LED and Third LED remain on

 
## **WIRED MODE CONNECTION:**

1. Connect the controller to the PC through the cable. Press the HOME button after connecting to turn on the controller, or it will just charge the controller.
2. The gamepad's default connection is the dongle. If you connect the cable and dongle at the same time, the USB cable will help charge the controller.

## **EXCHANGE D-PAD AND JOYSTICK FUNCTION:**

Press START and L3 (Push the left joystick) simultaneously to exchange between D-pad and Left Joystick.

# TROUBLESHOOTING

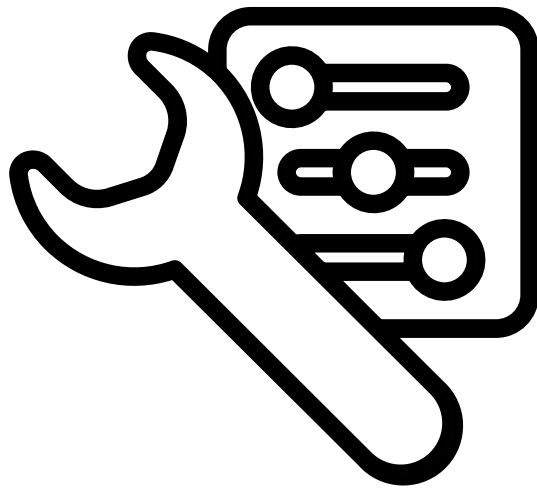

## TROUBLESHOOTING:

### **Why the gamepad does not work on my computer?**

1. Make sure the USB port is functional
2. Make sure the USB port is powered correctly
3. Try another USB port
4. User of Windows XP: install the driver imperatively
5. Use a USB port on the back of your computer

### **Why the gamepad does not work with my game?**

1. Your game does not support gamepad
2. Configure/activate your gamepad directly in the game interface

### **No vibration! Why?**

1. Your game does not support vibration
2. The vibration function is not activated in the settings of your game

# **WARNINGS**



### Warning and Safety Instructions:

**Do not attempt to repair:** Do not attempt to disassemble, open, repair or alter the products, its accessories, or the power cable. You could electrocute yourself to other hazards. Any signs of attempts to open and/or alter this device, including removing or tearing a sticker, will void the warranty.

**Not use near liquid:** To reduce any risks of fire or electric shock, do not use this device near liquid and do not expose it to rain or moisture. Do not attempt to dry the device with a hair-dryer or microwave oven.

**Risk of asphyxiation:** this device may contain small parts, plastic bags or packaging that could represent a risk of asphyxiation for children. Keep all small parts, bags and packaging out of the reach of children.

### Charging-related risks, leads/cables:

- Store all cables and leads in a manner that there is no risk of persons or animals accidentally tripping on them or pulling them when moving around the area where the device is located. Do not allow children to play with the cables and leads.
- To avoid any damage to the power cables and the power supply.
- Protect the electrical cables in a manner that no one can tread on them.
- Protect the electrical cables from pinching or excessive bending, in particular when connected to the power plug, Power supply unit, or the device.
- Do not pull abruptly on the power cables, do not bend them too tightly and not mistreat them in any other way.
- Do not expose the power cables to heat sources.
- Keep the power cables out of the reach of children and animals. Do not allow them to bite or chew them.
- When disconnecting the power cable, pull on the plug. Do not pull on the cable.
- If a power cable or power supply unit is damaged in any way, stop using it immediately.
- Disconnect your device during storms or if not used for extended periods of time.
- For devices provided with a mains power cable that connects to the power supply unit, always follow the instructions hereafter when connecting the power lead: connect the power cable to the power supply unit by fully engaging it, then connect the other end of the mains lead to the wall outlet.

## SUPPORT DETAILS

Contact no: 07969273222 (Mon-Sat 10am to 6PM)

Email: [cc@thecosmicbyte.com](mailto:cc@thecosmicbyte.com)

## WARRANTY

The Gamepad carries 1 Year warranty against manufacturing defects only. Physical, Water damage and Tampered products are not covered under warranty. Regular wear and tear from battery usage is not covered under warranty.



[Scan the QR code to know the Warranty Claim Procedure.](#)

## FAQ'S

[support.thecosmicbyte.com](https://support.thecosmicbyte.com)