

CosmicByte[®]
switch to GOD MODE

RAPTOR

**WIRELESS + WIRED
DUAL MODE GAMING MOUSE**



USER MANUAL

HIGHLIGHTS



Visit us at
www.thecosmicbyte.com

SPECIFICATIONS

1. Max Tracking Speed	30IPS
2. Acceleration	10G
3. Weight	96 Grams w/o cable
4. Max DPI	4800
5. Lowest DPI	800
6. Polling Rate	500
7. Cable Length	1.6m Braided
8. Mouse Feet Type	PTFE
9. Mouse Feet Thickness	0.58MM
10. Sensor	Pixart 3212
11. Switch Type	Huano 10M
12. Surface	ABS

FEATURES

- **Multi-option RGB:** 11 RGB effects modes on the mouse back and logo with a modern, fashionable appearance.
- **Dual-mode:** Offers both wired and 2.4G wireless connectivity.
- **Braided Cable:** Durable braided cable to prevent external damage and ensure longevity.
- **Adjustable DPI:** DPI ranges from 800 to 4800 easily adjustable using a button near the wheel.
- **10Mn Switches:** Equipped with Huano gaming switches rated for 10 million clicks.
- **500Hz Polling Rate:** Features the highest polling rate of 500Hz for excellent gaming performance.

STEPS TO CONNECT TO PC

1. Unpack the mouse from the packaging and remove the plastic film from the mouse's feet, if any.
2. Connect the mouse to the PC using the USB cable or the USB Wireless dongle
3. The mouse will be detected by Windows within 5-30 seconds.
4. Once detected, restart your PC.
5. Your mouse is now ready for use.

TROUBLESHOOTING

1. Mouse Not Powering On

- Check Battery/Charge:
 - Ensure the mouse has been charged or the battery is inserted correctly.
 - Use the included USB cable to charge the mouse for at least 30 minutes.
- Power Switch:
 - Ensure the power switch (located on the bottom) is turned ON.

2. Mouse Not Connecting

- Wireless 2.4GHz Mode:
 - Plug the USB dongle securely into your PC/laptop.
 - Switch the mouse to “2.4G” mode using the slider switch.
 - If not detected, try plugging the dongle into a different USB port.

3. Cursor Not Moving or Lagging

- Ensure you're using the mouse on a clean, flat surface.
- Avoid reflective or transparent surfaces (e.g., glass).
- Try increasing the DPI setting using the DPI button.
- Change the USB port or Bluetooth device for improved signal reception.

4. Buttons Not Working

- Reconnect the mouse to your device.
- Restart your PC or device and try again.
- Check for physical obstructions or dirt under the buttons.

5. Mouse Not Charging

- Ensure the USB cable is connected securely to both the mouse and power source.
- Try a different charging cable or port.
- A red LED may indicate charging; check LED status.

6. Mouse Disconnecting Randomly

- Check for low battery – charge the mouse fully.
- Ensure the USB dongle is not obstructed.

SUPPORT DETAILS

Customer Care Number: +91 7351615161 (Mon-Sat 10am to 6pm)

WhatsApp Support: +91 7351615161

Email: cc@thecosmicbyte.com

WARRANTY

- The Raptor Mouse carries 1 year warranty against manufacturing defects only.
- Physical, water damage and tampered products are not covered under warranty.



Scan the QR Code to know the Warranty Claim Procedure.