

Cosmic Byte®
switch to **GOD MODE**

UMBRA

TRI MODE GAMING MOUSE



USER MANUAL

HIGHLIGHTS



Visit www.thecosmicbyte.com to download
the software for the mouse

SPECIFICATIONS

Connectivity Modes:	Wired (USB Type-C) Wireless 2.4GHz (via USB Dongle) Bluetooth 5.0
Buttons: 6	Left Click Right Click Scroll Wheel (Middle Click) Forward Back DPI Switch
DPI Levels:	400 / 800 / 1200 / 1600 / 2400 / 4000
Polling Rate:	Wired & 2.4GHz: 125Hz / 250Hz / 500Hz / 1000Hz Bluetooth: 125Hz
Sensor:	PixArt A3104
Switches:	Huano (10 million clicks lifespan)
Charging Cable:	1.8m Type-C Paracord with Magnetic Ring
Battery Capacity:	300mAh Rechargeable Li-ion
Tracking Speed:	45 IPS
Acceleration:	1.8m Type-C Paracord with Magnetic Ring
Materials:	Top/Bottom Shell: ABS Plastic Mouse Feet: PTFE (Teflon)
Acceleration:	15G
Current Consumption:	≤18mA @ 3.7V
Product Dimensions:	116mm (L) × 60mm (W) × 35mm (H)
Weight:	53 ± 1 grams
System Compatibility:	Windows 2000 / XP / Vista / 7 / 8 / 10 / 11 macOS (Limited function support)

FEATURES

- **Tri-Mode Connectivity:**

Seamlessly switch between USB Wired, 2.4GHz Wireless (Dongle), and Bluetooth modes.

- **Lightweight Design:**

Weighing only 53g, ideal for long hours of gaming or work.

- **Multiple DPI Levels:**

Six customizable DPI settings for precise control.

- **Programmable Buttons:**

7 functional keys tailored for gaming and productivity.

- **High-Performance Sensor:**

Equipped with PixArt A3104 for smooth tracking and accurate response.

- **Battery Status Indicator:**

- Low Battery: Red light flashes slowly
- Charging: Blue light remains on
- Fully Charged: Blue light turns off

- **Durable Build:** Huano switches rated for 10 million clicks.

OPERATING INSTRUCTIONS

A. Wired Mode (USB Type-C)

1. Plug the included USB Type-C cable into the mouse and your PC.
2. The mouse will automatically switch to wired mode.

B. 2.4GHz Wireless Mode

1. Unplug the USB cable.
2. Slide the power switch to the top position (2.4G symbol).
3. Insert the USB dongle into your computer.
4. The indicator will flash green and turn off once connected.

To Re-Pair (if connection fails):

Press and hold **Left Click + Right Click + Scroll Wheel** for 3 seconds.

The green LED will blink rapidly. Once paired, the light will turn off.

C. Bluetooth Mode

1. Unplug the USB cable.
2. Slide the power switch to the bottom position (Bluetooth symbol).
3. On your device, search for and connect to "CB Umbra".
4. The blue light will turn off once connected.

To Re-Pair (if connection fails):

Press and hold **Left Click + Right Click + Scroll Wheel** for 3 seconds.

The blue LED will blink rapidly. Once paired, the light will turn off.

INDICATOR LIGHTS

Status	Indicator Behaviour
Low Battery	Red light flashes slowly
Charging	Solid blue light
Fully Charged	Blue light turns off
2.4GHz Pairing Mode	Green light blinks fast
Bluetooth Pairing Mode	Blue light blinks fast

TROUBLESHOOTING – Q&A

Q1: The mouse is not working in wired mode. What should I do?

A:

Ensure the USB Type-C cable is properly connected to both the mouse and your computer. Also, make sure the power switch on the mouse is turned off, as wired mode does not require the power switch to be on.

Q2: The mouse is not connecting in 2.4GHz wireless mode.

A:

1. Make sure the USB dongle is plugged into your computer.
2. Slide the power switch to the top position for 2.4GHz mode.
3. If the green light does not turn off, try re-pairing by pressing and holding Left Click + Right Click + Scroll Wheel for 3 seconds. The green light will blink rapidly. Once the connection is successful, it will turn off.

Q3: The mouse is not connecting via Bluetooth.

A:

1. Ensure the power switch is in the bottom position for Bluetooth mode.
2. On your device, enable Bluetooth and search for "CB Umbra".
3. If it doesn't connect, press and hold Left Click + Right Click + Scroll Wheel for 3 seconds to enter pairing mode. The blue light will blink quickly. Once paired, the light will turn off.

Q4: The cursor is lagging or skipping movement.

A:

Try the following:

- Use the mouse on a smooth, non-reflective surface or mouse pad.
- Increase the DPI setting using the DPI button.
- Ensure the battery is not low if you're using wireless mode.

Q5: The battery is not charging.

A:

- Ensure the charging cable is fully plugged in.
- Use a known working USB charger or PC USB port.
- If the blue charging light does not come on, try a different cable or charger.

Q6: The buttons are not responding.**A:**

- Test the mouse on another computer to rule out software conflicts.
- Restart your PC and try reconnecting the mouse in the desired mode.
- If using Bluetooth or 2.4GHz, ensure its properly paired.

Q7: How do I know if the mouse is charging or fully charged?**A:**

- While Charging: Blue light stays on.
- Fully Charged: Blue light turns off.
- Low Battery: Red light blinks slowly.

Q8: The mouse is not waking up after being idle.**A:**

Move the mouse or press any button to wake it from sleep mode. If it still doesn't respond, check the battery level or reconnect it using the appropriate mode.

ADDITIONAL NOTES**• Power Saving:**

The mouse enters sleep mode after a period of inactivity. Move the mouse or click any button to wake it.

• Battery Care:

Charge regularly to maintain battery health. Avoid complete discharge.

SUPPORT DETAILS

Customer Care Number: +91 7351615161 (Mon-Sat 10am to 6pm)

WhatsApp Support: +91 7351615161

Email: cc@thecosmicbyte.com

WARRANTY

- The Umbra Tri-Mode Gaming mouse carries 1 year warranty against manufacturing defects only.
- Physical, water damage and tampered products are not covered under warranty.



Scan the QR Code to know the Warranty Claim Procedure.