




KILONOVA 33351C

RGB DUAL MODE WIRELESS + WIRED MOUSE



USER MANUAL

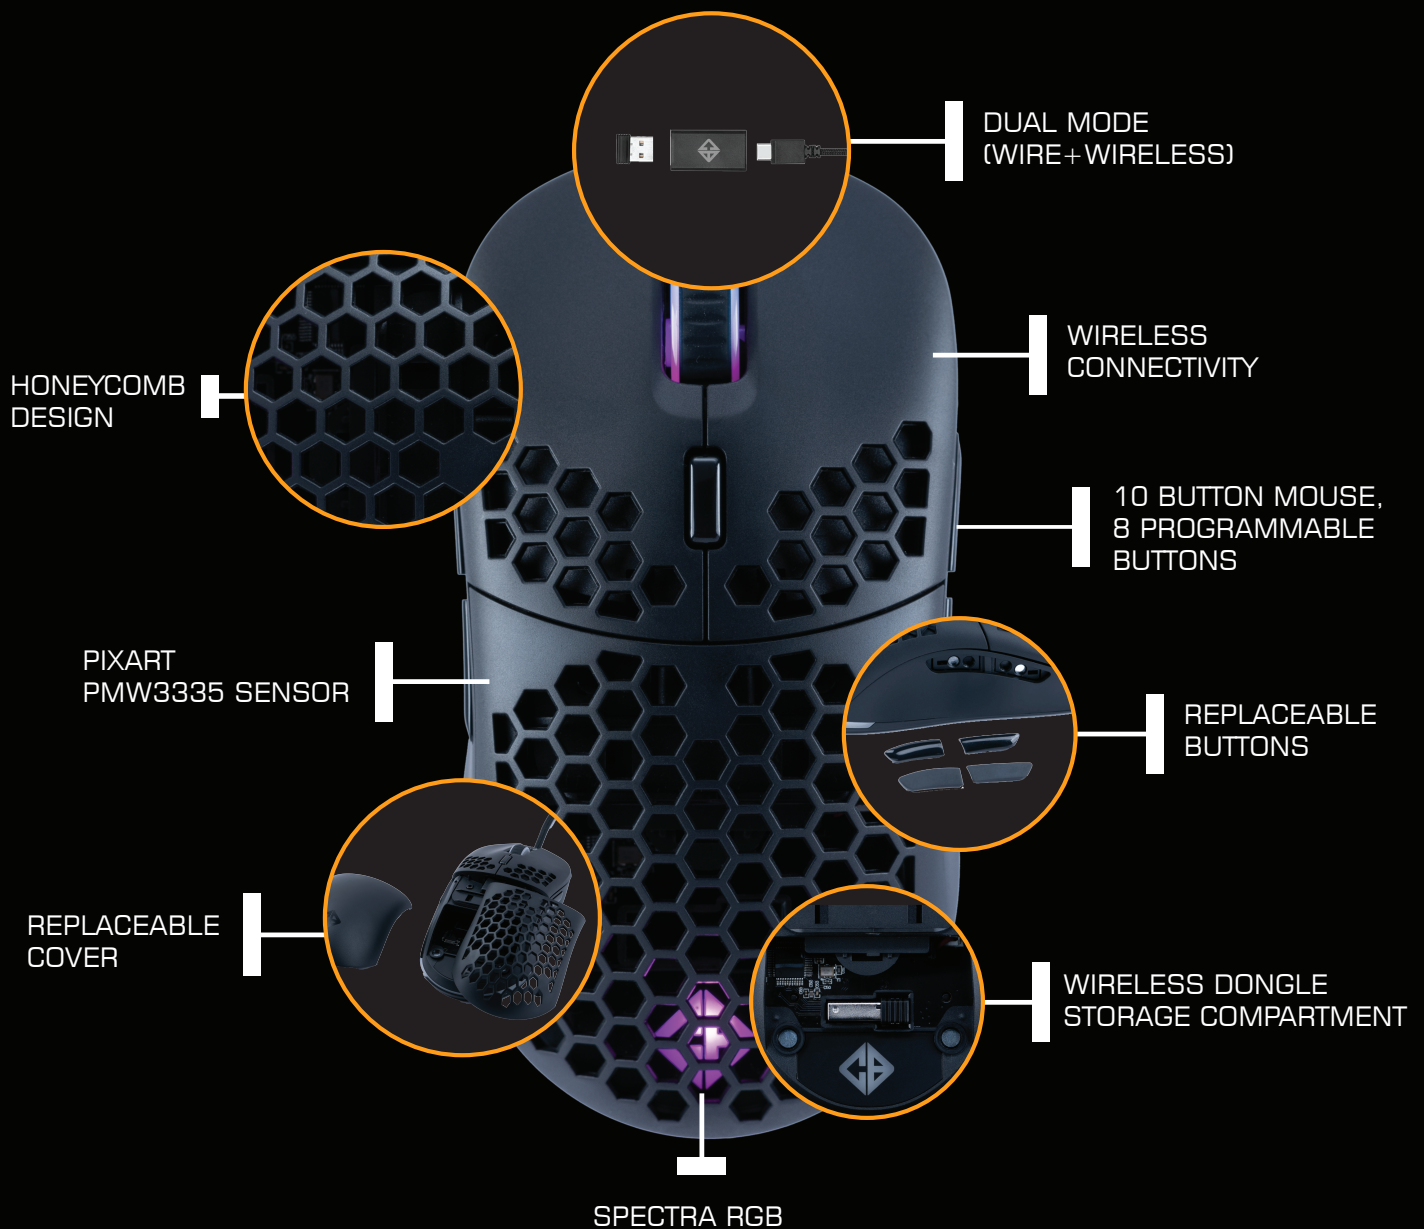

Visit www.thecosmicbyte.com to download software for the mouse

Specifications

· Max Tracking Speed	400 IPS
· Acceleration	50g Max
· Weight	89g±2g (Without Cable)
· Max DPI	Up to 16000 by Hardware, up to 16000 by software
· Lowest DPI	100
· Polling Rate	500Hz Default- 125Hz/250Hz/500Hz/1000Hz
· Battery	400mAh Lithium Ion Polymer
· Cable Length	1.6M Paracord (Light& Flexible, It's like it's Wireless)
· Mouse Feet Type	PTFE (Teflon)
· Mouse Feet Thickness	0.45 mm
· Default DPI settings	800
· Sensor	PixArt 3335
· Switch Type	L/R: Huano 20M
· Surface	Injection Matt Black

Features

- Ambidextrous Design-Symmetrical in shape making it suitable for both right and left-handed users.
- Lightweight Multi-hole Honeycomb Design- At just 89 grams, you can shoot and flick faster.
- Excellent Grip- Comfortable for Palm, Fingertip and Claw grips.
- 10 Button Mouse- 8 Programmable Buttons- Assign macros and functions through software to each button.
- Spectra RGB LED lighting effect configurable through mouse software.
- PIXART PMW3335 sensor.
- 1.6M Paracord Cable- Ultra lightweight and flexible “Feels like Wireless”.
- Dual Mode: Use the mouse as wired or wireless dual mode. Just plug in the mouse to the PC using the included cable to use in wired mode and charge the battery at the same time.
- Plug in the Wireless Dongle to use in wireless mode.
- SYSTEM REQUIREMENTS: Windows 8 and above.

● Steps to Connect to PC

1. Unpack the mouse from the packaging and remove the plastic film from the mouse feet if any.
2. Connect the mouse to the PC using the USB C to USB A cable and charge the mouse for use. Once charged disconnect the cable and insert the wireless dongle stored in the mouse compartment to the PC USB port.
3. The mouse will be detected by Windows within 5-30 seconds.
4. Download the software for the mouse from the Cosmic Byte website.
5. Install the software (Note: Some antivirus may try to stop installation as software would not be updated in their database, so disable antivirus before installation)
6. Once installed restart your PC.
7. Your mouse is now ready for use. You can customize the functions of the mouse using the software

● Change the Mouse Top Cover and Side Buttons

- Your Cosmic Byte mouse comes with replaceable top cover and side buttons.
- The top cover and side buttons are attached to the mouse using magnets. To replace it just pull the top cover or side buttons from the mouse and replace it with the optional cover and buttons.

Troubleshooting

1. Unable to detect mouse on PC

Ans: Try connecting the mouse on a different USB port on the PC.
Try connecting the mouse directly on the motherboard USB port of the PC.
Connect the mouse to the extension adapter supplied.

2. Software does not detect the mouse.

Ans: Kindly uninstall all other mouse software previously installed on the PC.
Restart the PC, unplug the Mouse and reinsert it again.

3. There is a lag in the mouse input.

Ans: Connect the wireless dongle to the extension adapter and keep it directly facing towards the mouse.
Try to keep the wireless dongle as close to the mouse as feasible to to reduce latency.

Support details

Phone: 1800 31300 7700 (Mon-Fri 10am to 5PM)

Email: cc@thecosmicbyte.com

Warranty

The mouse carries 1 Year warranty against manufacturing defects only. Physical, Water damage and Tampered products are not covered under warranty.



[Scan the QR code to know the Warranty Claim Procedure.](#)

FAQ's

[Support.thecosmicbyte.com](https://support.thecosmicbyte.com)